




Polaris RZR 1000/900 (2015-18) 4 Seater Roof Installation Instructions

Parts Included:

- (1) Tinted Polycarbonate Roof with Wind Deflector
- (4) Stainless Steel Rubber Cushioned Clamps
- (2) $\frac{1}{4}$ "-20x1- $1\frac{1}{4}$ "Stainless Steel Bolts
- (6) Stainless Steel Neoprene Bonded washers
- (4) $\frac{1}{4}$ "-20 $\frac{3}{4}$ " Stainless Steel Bolts
- (6) $\frac{1}{4}$ "-20 Stainless steel Hex Nuts
- (4) 2- 65" and 2-35" Rubber Cushion Strips

Top View

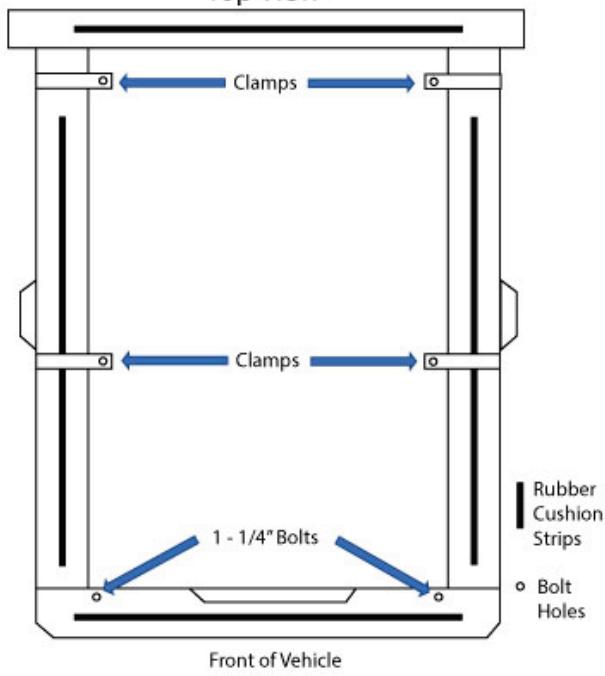

Installation Instructions:

1. Place 4 Rubber Bumpers in positions as indicated on diagram
2. Remove the 2 bolts from the top of the front visor and remove the clips that act as nuts for these bolts (these bolts will be replaced).
3. Set the roof in place.
4. Place the bolts with bonded washers installed into the 2 front holes in the roof and through the vehicle brackets. Install nuts on the bolts.
5. Insert a bonded washer onto the 4 rear bolts and then insert the bolts through the roof holes and clamps.
6. Install nuts on all four bolts and tighten.